

PRESSURE REDUCING VALVE FOR WATER

EUROBRASS 143 PN25



Direct acting pressure reducing valve piston operating with pressure compensation system

Main body and components made in brass alloy in conformity to UBA

PN 25 – Max inlet pressure 25 bar

Outlet pressure range 0,5 – 6 bar

Factory setting 3 bar

Maximum working temperature: 80° C

Stainless steel seat

Stainless steel bar (sizes higher than 1")

NBR rubber parts


Designed for use with water and air

Pressure gauge connections ¼"

Threaded FF ISO 228


Available sizes: from 1/2" (DN15) to 4" (DN100)

External sand blasted brass and nickel plated

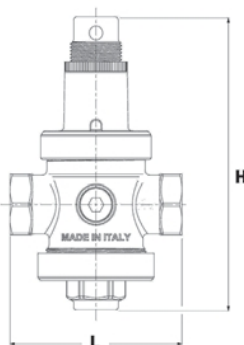

Item N	Size	DN	H mm	L mm	Weight Gr
433949 004	½"	15	120	75	790
433949 006	¾"	20	150	85	1130
433949 008	1"	25	160	90	1340
433949 010	1¼"	32	220	125	2090
433949 011	1½"	40	220	130	2150
433949 012	2"	50	250	140	3100

INSTALLATION GUIDELINES

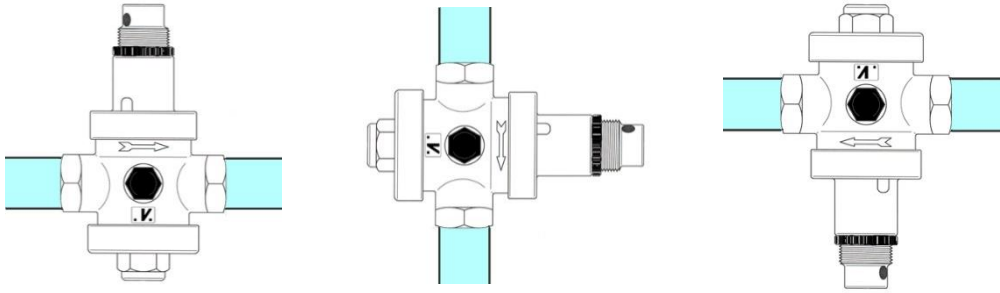


The pressure reducers EUROBRASS 143 don't get the effects, in their functioning, of gravity force; therefore they can be installed in the plant in any position:

Pressure reducing valves can be damaged by dirty water; therefore we advise to install a self-cleaning filter upstream before the pressure reducer, in order to protect the valve and any other mechanism (thermostatic mixers, taps, etc.).

When there is a device which produce or store hot water or pipes are exposed to sudden changes in temperature, an increase of outlet pressure may occur; this event is due to the raise in pressure that follows the temperature rising: an expansion vessel between downstream the pressure reducing valve will avoid this problem.

We recommend moreover to install a Stopshock valve to prevent water hammer which would damage the inner parts of the pressure reducer and other devices in the waterworks

Scheme recommended for the installation of pressure reducers:

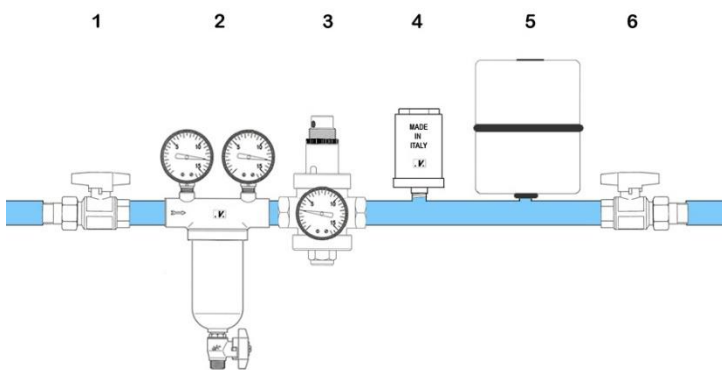

1 – ball valve

2 – Self-cleaning filter

3 – Pressure reducing valve

4 – Water hammer absorber

5 – Expansion tank

6 – ball valve



All pressure reducers are tested before being packaged; during the proof they are pre-set at the outlet pressure of 3 bars; outlet pressure can be easily adjusted once the pressure reducing valve is installed on site.

In order to modify the outlet pressure, once removed the seal, you should only loosen the fixing ring and turn the spring holder as indicated in the pictures sequence. By turning clockwise the pressure increases, while counter-clockwise the pressure decreases. A right setting should be made while the plant outlet is closed.

⚠WARNING: Installation or any change of outlet pressure must be performed by qualified personnel.